

INSTRUKCJA OBSŁUGI

HULAJNOGA

Model: 250276-200



SPIS TREŚCI

1	Użycie zgodnie z przeznaczeniem	2
2	Dane techniczne	2
3	Zasady bezpiecznego użytkowania	2
4	Objaśnienie symboli	4
5	Zawartość zestawu	5
6	Budowa	5
7	Użytkowanie	7
8	Czyszczenie i konserwacja	11
9	Naprawa	11
10	Utylizacja	11
11	Przechowywanie i transport	12
12	Deklaracja	12
13	Gwarancja	12

1 Użycie zgodnie z przeznaczeniem

Przestrzeganie instrukcji zapewnia bezpieczne użytkowanie hulajnogi.

Przeczytaj uważnie instrukcję przed rozpoczęciem korzystania z hulajnogi i zachowaj ją do późniejszego wykorzystania.

Produkt przeznaczony jest do użytku na świeżym powietrzu. Wspaniały dodatek do rodzinnych spacerów i zabaw. Poprawia kondycję, koordynację ruchową oraz rozwija zdolności utrzymywania równowagi.

Produkt nie jest zabawką i należy zwracać uwagę, aby dzieci w wieku poniżej 3 lat nie bawiły się hulajnogą. Zalecany wiek użytkownika: 8+ lat.

Hulajnoga spełnia wymagania normy EN 14619:2019 (klasa A dla użytkowników o masie od 20 kg do 100 kg).

2 Dane techniczne

Numer partii	POJM250276
Model	250276-200
Wymiar (złożona)	86 x 32 x 20 cm
Wymiar (rozłożona)	Wymiary po rozłożeniu (maksymalna wysokość): 83,5 x 36,5 x 96,0 cm Trójstopniowa regulacja kierownicy (wysokość): 86-91-96 cm
Wymiary podestu	31 x 12 cm
Średnica koła	20 cm
Maksymalne obciążenie	100 kg
Łożyska	ABEC 7

3 Zasady bezpiecznego użytkowania

1. Przed użyciem należy przeczytać całą instrukcję.
2. **Ostrzeżenie! Noś środki ochrony indywidualnej (kask, ochraniacze rak, nadgarstków, łokci, kolan).**
3. Zawsze noś buty kiedy używasz hulajnogi.
4. **UWAGA!** Produkt nie odpowiada ogólnym przepisom ruchu drogowego i nie może być stosowany na drogach.
5. Używanie produktu w ruchu ulicznym oraz w miejscach nie wyznaczonych do jazdy może stanowić zagrożenie dla zdrowia i życia.

6. **UWAGA!** Hulajnoga przeznaczona jest dla użytkowników o maksymalnej wadze 100 kg.
7. Hulajnoga powinna być użytkowana z ostrożnością, ponieważ wymaga dużej zręczności, umiejętności kierowania oraz balansowania ciałem w celu uniknięcia upadków i kolizji powodujących obrażenia ciała użytkownika i innych osób.
8. Nie używaj produktu w ciemności.
9. Zaleca się zakładanie użytkownikowi elementów odblaskowych.
10. Na gładkich powierzchniach istnieje ryzyko poślizgu i upadku lub uderzenia w inny przedmiot.
11. **UWAGA!** Ze względu na odstające małe części montaż powinien być zawsze wykonywany przez osobę dorosłą.
12. Produkt powinien być używany każdorazowo tylko przez jedną osobę.
13. Produkt najlepiej jest zlecić do naprawy specjalście.
14. **UWAGA!** Produkt nie jest przeznaczony do skakania!
15. **UWAGA!** Nie wolno modyfikować produktu, w taki sposób, aby zagrażał Państwa bezpieczeństwu.
16. **UWAGA!** Należy zawsze sprawdzać zamocowania elementów łączących, a także mechanizm blokady kierownicy hulajnogi oraz regulację wysokości kierownicy. Sprawdź czy śruby oraz nakrętki są poprawnie dokręcone.
17. Natychmiast zaprzestań używania produktu jeśli zauważasz uszkodzenia w jego konstrukcji.
18. **UWAGA!** Podczas rozkładania i składania produktu należy zwracać szczególną uwagę na miejsca, gdzie można przytrzasnąć lub skaleczyć dłoń.
19. Podczas korzystania z produktu, zawsze należy zwracać uwagę na inne osoby – należy jeździć zawsze z dala od innych uczestników ruchu.
20. Produkt należy używać tylko na równej powierzchni z dala od ulic i ruchliwych miejsc. Należy unikać otwartych wód, stromych powierzchni, wybojów oraz schodów.
21. Nie wieszaj nic na rączkach podczas jazdy.
22. Przed jazdą upewnij się czy na powierzchni nie występują dziury, doły, kamienie, które mogłyby spowodować upadek i uszkodzenie ciała.
23. **UWAGA!** Nigdy nie należy używać produktu przy złej widoczności lub w ciemności!
24. **UWAGA!** Nie należy używać produktu w czasie złych warunków pogodowych – np. deszczu. Ryzyko poślizgnięcia.
25. **UWAGA!** Przy dłuższym używaniu hulajnogi może nagrzewać się hamulec.

Nie wolno dotykać go do momentu ochłodzenia – ryzyko oparzenia!

26. Zachowaj instrukcję oraz jeśli to możliwe opakowanie.

27. Wersja elektroniczna instrukcji obsługi jest dostępna pod adresem:
<https://instrukcje.vershold.com>

4 Objaśnienie symboli

	Przeczytaj instrukcję.
	Znak towarowy, który oznacza, że importer wniósł wkład finansowy w budowę i funkcjonowanie systemu odzysku i recyklingu odpadów opakowaniowych.
	Oznaczenie materiału, z którego wykonane jest opakowanie – tektura falista.
	Założ wyposażenie ochronne – kask, ochraniacze rąk, nadgarstków, łokci, kolan.
	Segreguj odpady – oznakowanie wskazujące potrzebę segregacji odpadów.
	Oznaczenie pojemnika, do którego powinno trafić pudełko – PAPIER.
	Oznaczenie pojemnika, do którego powinna trafić folia – PLASTIK/METAL.
	Oznaczenie pojemnika, do którego powinien trafić uchwyty – PLASTIK/METAL.

5 Zawartość zestawu


Ilość	Element
1	Hulajnoga
1	Instrukcja obsługi
2	Klucz imbusowy

Otwórz opakowanie i ostrożnie wyjmij produkt. Sprawdź, czy zestaw jest kompletny i bez uszkodzeń. Jeśli stwierdzisz, że brakuje części bądź są uszkodzone, nie używaj produktu, lecz skontaktuj się ze sprzedawcą. Zachowaj opakowanie lub zutylizuj zgodnie z lokalnymi przepisami.



Uwaga! Dla bezpieczeństwa dzieci proszę nie zostawiać swobodnie dostępnych części opakowania (torby plastikowe, kartony, styropian itp.). Niebezpieczeństwo uduszenia!

6 Budowa

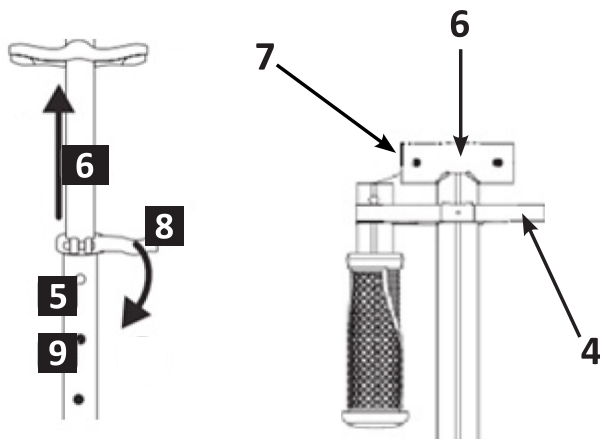



1. Zacisk-śruba (po drugiej stronie) zabezpieczający przed złożeniem

2. Dźwignia zabezpieczająca przez złożeniem/rozłożeniem

3. Rączki kierownicy

4. Mocowania rączek

5. Przycisk blokujący

6. Kolumna kierownicy T

7. Otwory w kierownicy

8. Zacisk szybkiego zamknięcia (kolumny kierownicy)

9. Otwór regulujący wysokość kierownicy

10. Podest

11. Tylny hamulec

12. Nóżka

13. Śruby mocujące

14. Kółko

15. Łożysko


16. Powierzchnia antypoślizgowa

17. Odstępnik

7 Użytkowanie


7.1. Złożenie (rys. A)

- 1 Poluzuj u dołu zacisk zabezpieczający przed złożeniem (1).
- 2 Podciągnij do góry dźwignię (2).
- 3 Rozłóż kolumnę kierownicy T (6) do przodu, aż „zaskoczy”. Dokręć zacisk zabezpieczający (1).

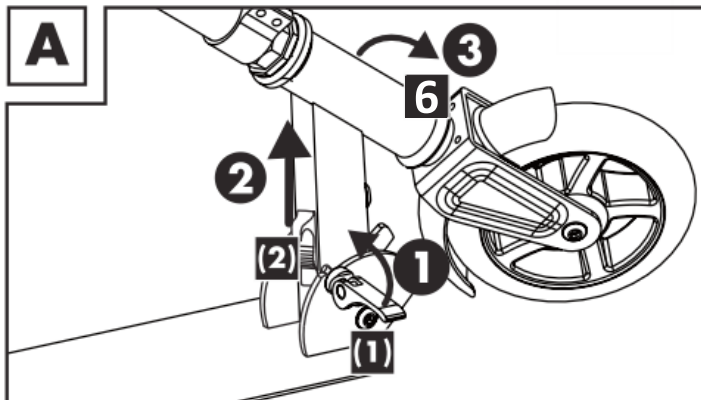

7.2. Montaż ręczek kierownicy (rys. B)


- Wyciągnij ręczki (3) z mocowań (4).
- Wciśnij przyciski blokujące (5) na ręczkach oraz wsuń ręczki po obydwu stronach do kolumny kierownicy T (6). Przyciski blokujące powinny zaskoczyć w odpowiednich otworach (7) w kierownicy.

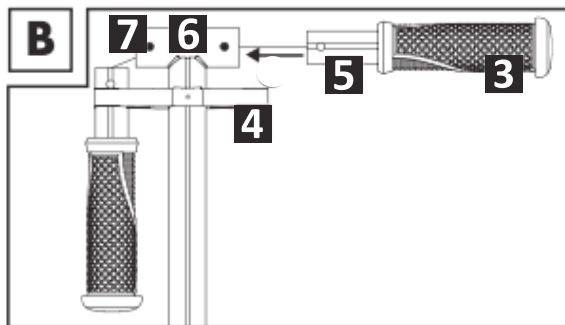

7.3. Regulacja wysokości kierownicy (rys. C)


- Kolumnę kierownicy T (6) można regulować w trzech różnych wysokościach.
- UWAGA! Z produktu można korzystać tylko wtedy, gdy przycisk blokujący (5) „zaskoczył” w jeden z trzech przeznaczonych do tego otworów (9), a następnie kolumna kierownicy T (6) została zabezpieczona szybkim zamknięciem zacisku (8).

- 1 Poluzuj szybkim zamknięciem zacisku (8) przy kolumnie kierownicy T (6).
- 2 Podciągnij kolumnę kierownicy T (6) do góry, aż przycisk blokujący (5) zaskoczy w jeden z trzech przeznaczonych do tego otworów (9).
- 3 Zabezpiecz kierownicę szybkim zamknięciem.

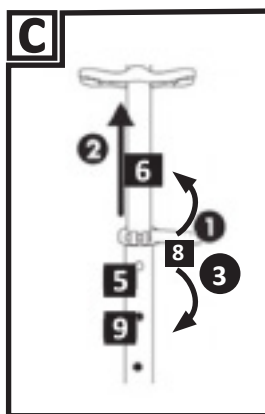

Uwaga! Przed użyciem sprawdź poprawność zablokowania zaczepów szybkiego zamknięcia kolumny kierownicy. Niebezpieczeństwo wypadku.


7.4. Łożysko głowicy kierującej (rys. D)

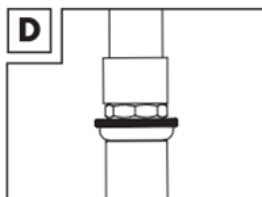

- Przy zakupie produktu łożysko głowicy kierującej zostało już uregulowane. Jeśli w trakcie użytkowania kierownica okaże się zbyt luźno lub mocno docięnięta, łożysko należy ponownie wyregulować w warsztacie rowerowym.


7.5. Złożenie produktu w celu przetransportowania (rys. E, F, G)

- Poluzować zacisk szybkiego zamknięcia (8) na kolumnie kierownicy T (6), nacisnąć przycisk blokujący (5), kolumnę kierownicy T (6) przesunąć aż na sam dół, następnie zablokować zacisk szybkiego zamknięcia (8).
- Nacisnąć przyciski blokujące (5) ręczki, wyciągnąć ręczki (3) z rury i przymocować do uchwytów.
- Poluzować u dołu zacisk zabezpieczający przed złożeniem (rys. E), a dźwignię (2) pociągnąć do góry. Kolumnę kierownicy T (6) przycisnąć w kierunku podestu, aż zaskoczy (rys. F). Zablokować u dołu zacisk zabezpieczający przed złożeniem (rys. G).

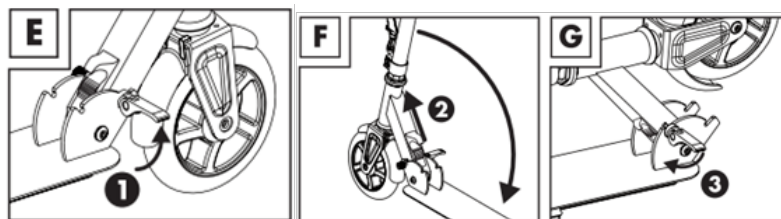

7.6. Jeżdżenie, hamowanie, parkowanie (rys. H)


- Postaw nogę na podeście (10) i przy pomocy drugiej nogi rozpędź hulajnogę poprzez odpychanie.
- W celu zahamowania należy nacisnąć na tylny hamulec (11) lub hamulec ręczny (18).
- W celu zaparkowania należy rozłożyć nóżkę (12).
- UWAGA: Produkt należy parkować tylko na równej powierzchni.

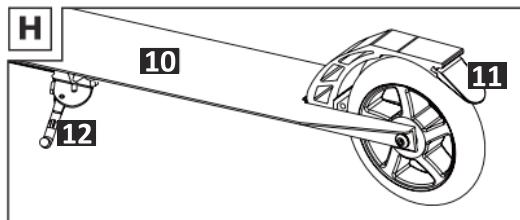

7.7. Wymiana kółek (rys. I)

UWAGA: Należy przestrzegać danych technicznych. Kółka o innej średnicy mogą zmienić właściwości jazdy oraz w pewnych warunkach doprowadzić do zagrożenia bezpieczeństwa użytkownika.

- W wyniku użytkowania produktu, co jakiś czas zużywają się kółka. Zużycie zależy m.in. od warunków atmosferycznych, rodzaju powierzchni, masy ciała użytkownika, materiału oraz twardości kółek. Zaleca się raz na jakiś czas wymianę kółek.
- Odkręć śruby mocujące (13) przy pomocy dwóch kluczy imbusowych (rozmiar 5, dołączone do zestawu).
- Wyciągnij śruby mocujące i wyjmij kółko.
- Wmontuj nowe kółko (14) i przymocuj je śrubami mocującymi (13).

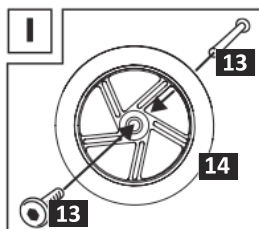


UWAGA: Jeśli po wymianie kółko ociera się lub jest za luźne po bokach, nie wolno używać produktu!

- Po kilku minutach jazdy sprawdź czy wszystkie śruby są mocno zamocowane oraz czy nie są odkręcone lub poluzowane. Dokręć śruby jeszcze raz, by upewnić się, że kółko swobodnie kręci się i nie występują szmery pochodzące z łożysk.

7.8 Wymiana łożysk w kółkach (rys. J)

- Wymontuj kółka (14) (patrz punkt 7.7.).
- Wyciśnij łożysko za pomocą odstępnika (17) przy pomocy klucza imbusowego i wyjmij odstępnik.
- Wyciśnij łożysko (15) przez naciśnięcie za pomocą klucza imbusowego.
- Wciśnij nowe łożysko. Przekręć kółko, wstaw odstępnik (17), a następnie wciśnij drugie nowe łożysko.
- Ponownie przymocuj kółka.

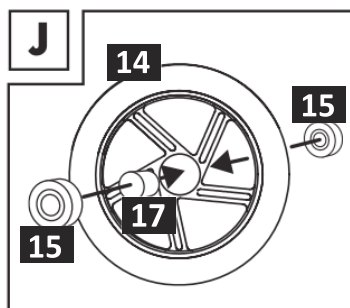

8 Czyszczenie i konserwacja

Prawidłowa oraz regularna konserwacja oraz utrzymywanie hulajnogi w czystości zwiększa bezpieczeństwo użytkowania produktu.

1. Po użyciu produktu zaleca się szczegółowe czyszczenie oraz suszenie. Usuń małe kamyczki oraz pozostałe przedmioty, które ewentualnie zaczepiły się o kółka.
2. Mokre łożyska kółek oczyść za pomocą suchej szmatki.
3. Aby zapobiec powstaniu rdzy, łożyska należy posmarować z zewnątrz odpowiednim smarem do łożysk.
4. Regularnie sprawdzaj stan kół, sztywność mocowań, blokadę wysokości kierownicy, blokadę służącą do składania/rozkładania produktu oraz podestu – zużycia antypoślizgowej powierzchni, jej nadłamania. Sprawdzaj również stan mocowań – upewnij się, że śruby są mocno dokręcone (po jakimś czasie użytkowania mocowania mogą się poluzować).
5. Produkt należy zawsze przechowywać w suchym pomieszczeniu.
6. Nie należy dokonywać żadnych modyfikacji poza instrukcjami zawartymi w niniejszej instrukcji.

9 Naprawa

Nie naprawiaj samodzielnie, w razie konieczności zlecaj naprawę wykwalifikowanej osobie.

W przypadku wymiany łożysk i kółek upewnij się, że zamontowane są elementy podobnej klasy jak wymienione w specyfikacji produktu.

10 Utylizacja

Materiały z opakowania należy zabezpieczyć przed dziećmi, gdyż stanowią źródło zagrożenia.

Utylizacji opakowania należy dokonać zgodnie z przepisami lokalnymi.

11 Przechowywanie i transport

Zalecane jest przechowywanie produktu w oryginalnym opakowaniu.

Zawsze przechowuj produkt w suchym wentylowanym miejscu, niedostępnym dla dzieci.

Chronić produkt przed wibracjami i wstrząsami podczas transportu.

12 Deklaracja

Produkt został zaprojektowany, wyprodukowany i wprowadzony na rynek zgodnie z wymaganiami normy EN 14619:2019 (klasa A).

13 Gwarancja

W celu reklamacji produktu **należy skontaktować się ze Sprzedawcą.**

Wszystkie pytania i problemy związane z funkcjonowaniem produktu lub zgłoszeniem reklamacji można kierować:

- przez e-mail: **infolinia@vershold.com**;
- telefonicznie: +48 667 090 903.

Gwarancja

1. Ten produkt objęty jest gwarancją. Termin gwarancji jest zgodny z ustawowym prawem państwa, na którego terytorium znajduje się punkt sprzedaży. Termin gwarancji wynosi nie mniej niż 36 miesięcy, licząc od dnia, kiedy rzecz została kupującemu wydana.

2. Produkt będzie, wedle uznania Gwaranta, podlegał:

- a) bezpłatnej naprawie przez Gwaranta, z zastrzeżeniem, że zdemontowane, uszkodzone lub wadliwe części produktu w celu zapewnienia bezpieczeństwa Klienta stają się własnością Gwaranta,
- b) wymianie produktu na nowy w miejscu zakupu produktu, w związku z czym uszkodzony lub wadliwy produkt staje się własnością Gwaranta,
- c) zwrotowi w zamian za zwrot ceny za zakupiony produkt, w związku z czym uszkodzony lub wadliwy produkt staje się własnością Gwaranta.

3. Za produkt uszkodzony uważa się taki produkt, który nie spełnia funkcji określonych w instrukcji obsługi, a przyczyną tego stanu jest wewnętrzna wada urządzenia.

4. Uprawniony do gwarancji jest zobowiązany dostarczyć urządzenie do Punktu Obsługi Klienta w danym sklepie w celu zgłoszenia reklamacji. Przy realizacji uprawnień z tytułu gwarancji należy okazać paragon zakupu lub fakturę oraz

wskazać możliwie dokładny opis wady produktu.

5. Gwarancja nie obejmuje produktów z uszkodzeniami mechanicznymi nie powstałymi z winy producenta lub dystrybutora, a w szczególności z powodu wadliwego użytkowania lub wynikłymi w następstwie działania siły wyższej.

6. Gwarancją nie są objęte produkty, w których usunięta została plomba zabezpieczająca, chyba, że dokonał tego uprawniony pracownik serwisu.

7. Punkt naprawczy dołoży wszelkich starań, aby dokonać naprawy w terminie 21 dni. Termin ten może ulec przedłużeniu do 1 miesiąca w przypadku zaistnienia potrzeby zakupu części zapasowych, którymi nie dysponuje aktualnie punkt naprawczy.

8. Zaleca się reklamowanie sprzętu kompletnego, celem usprawnienia działań serwisowych.

9. Niniejsza gwarancja nie wyłącza, nie ogranicza ani nie zawiesza uprawnień kupującego wynikających z gwarantowanego ustawowo prawa.

10. Terytorialny zasięg ochrony gwarancyjnej obejmuje terytorium kraju, w którym dokonano sprzedaży produktu.

Importer (Gwarant):

VERSHOLD POLAND Sp. z o.o.

ul. Żwirki i Wigury 16A,

02-092 Warszawa, Polska

Wyprodukowano w Chinach

INSTRUCTION MANUAL

SCOOTER

Model: 250276-200



TABLE OF CONTENTS

1	Intended use	15
2	Technical data	15
3	Safety instructions	15
4	Explanation of symbols	17
5	Set contents	18
6	Overview	18
7	Use	20
8	Cleaning and care	24
9	Repair	24
10	Disposal	24
11	Handling and storage	24
12	Declaration	24
13	Warranty	25

1 Intended use

Following the instruction provides safe use of the scooter.

To ensure best use of the product, carefully read the operating instructions before starting using the scooter and keep these instructions for future reference.

This product is for outdoor use only. Ideal for family walks and outdoor activities. Improves body condition and coordination as well as develops the ability to maintain balance.

This product is not a toy. Make sure children under the age 3 are not using the scooter. Recommended user age: 8+ years.

The scooter complies with the regulation EN 14619:2019 (class A for users with body mass more than 20 kg and less than 100 kg).

2 Technical data

Lot number	POJM250276
Model	250276-200
Size folded	86 x 32 x 20 cm
Size unfolded	Dimensions when unfolded (maximum height): 83.5 x 36.5 x 96.0 cm Three-step steering wheel adjustment (height): 86-91-96 cm
Platform size	31 x 12 cm
Wheel diameter	20 cm
Maximum load	100 kg
Bearings	ABEC 7

3 Safety instructions

1. Please read this manual in its entirety before using the product
2. **WARNING! Wear personal protective equipment (helmet, hand, wrist, elbow, knee protectors).**
3. Always wear footwear when using the scooter.
4. **ATTENTION!** The product does not conform to general traffic regulations. It cannot be used on roads.
5. Use of the product in traffic and in places not intended for riding may

endanger your health and life.

6. **WARNING!** It is necessary to make sure users with body weight over 100 kg do not ride this scooter.
7. Scooter should be used carefully, as it requires good agility, the ability to steer and to keep one's balance as to avoid falls and collisions, which might cause injuries to the user and other persons.
8. Do not ride in darkness.
9. It is recommended to wear reflective elements while using the scooter.
10. The risk of skidding and falling or hitting something is present when riding on smooth surfaces.
11. **ATTENTION!** Due to protruding small parts, assembly should always be performed by an adult.
12. The product should be used only by one person at a time.
13. It is recommended to always have a specialist perform any repairs of the scooter.
14. **ATTENTION!** The product is not intended for jumping!
15. **ATTENTION!** You must not modify or alter the product in any way that may jeopardize the user's safety.
16. **ATTENTION!** Always check whether the connecting elements are mounted correctly. Always check the scooter steering tube locking mechanism and the steering tube height adjustment. Make sure the screws and nuts are tightened properly.
17. Immediately stop using the product if you notice damages to its structure.
18. **ATTENTION!** When assembling or disassembling the product, beware of spots where your hand could get caught or injured.
19. While using the product, always pay attention to other people and always ride in a distance from other traffic participants.
20. Only use the product on an even surface, away from streets and busy places. Avoid open water, steep or ice-covered surfaces, bumps and stairs.
21. Do not hang anything on the handles while driving.
22. Before riding the scooter, make sure there are no pits, holes, stones or bumps in the surface which could cause a fall and bodily injury.

23. **ATTENTION!** Never use the product when visibility is low or when it is dark!
24. **WARNING!** Do not use the product during bad weather conditions – eg. rain. Risk of slipping.
25. **ATTENTION!** The brake may get hot after the scooter has been used for a while. Do not touch it before it cools down – risk of burns!
26. Keep this manual and, if possible, also the packaging.
27. An electronic version of the manual is available at <https://instrukcje.vershold.com>

4 Explanation of symbols

	Please read this manual.
	Symbol indicating that the importer has contributed financially to the construction and operation of packaging material recovery and recycling system.
	Symbol indicating the material the packaging is made of – corrugated fibreboard.
	Wear safety equipment – a helmet and pads protecting the hands, wrists, elbows and knees.
	Sort your waste – symbol indicating the necessity to sort waste.
	Symbol of the relevant waste bin for the box – PAPER.
	Symbol of the relevant waste bin for the foil – PLASTIC/METAL.
	Symbol of the relevant waste bin for the handle – PLASTIC/METAL.

5 Set contents


Qty	Item
1	Scooter
1	Instruction manual
2	Allen key

Open the packaging and carefully take out the scooter. Check if the product is intact and does not have any damages. In case if the product is missing any element or is damaged, do not use the product, but contact the sales person. Keep the package or dispose of it in accordance with the local regulations.



Caution! To keep children safe, do not leave packaging parts (plastic bags, cardboard boxes, expanded polystyrene elements etc.) freely accessible. Danger of suffocation!

6 Overview

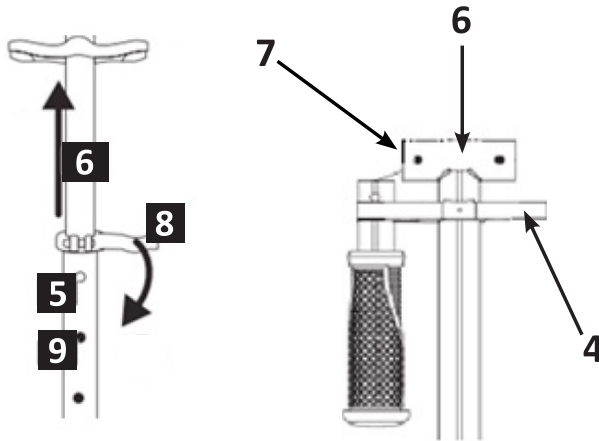




- | | |
|--|---|
| 1. Clamp-screw (on the other side)
to prevent folding | 9. Socket regulating the height of
the steering tube |
| 2. Lever of the anti-folding
mechanism | 10. Platform |
| 3. Foldable handlebars | 11. Brake |
| 4. Handlebar mounts | 12. Stand |
| 5. Blocking button | 13. Mounting screws |
| 6. Steering tube T | 14. Wheel |
| 7. Holes in the steering tube | 15. Bearing |
| 8. Quick closure (of the steering
tube) | 16. Non-slip surface |
| | 17. Spacer |

7 Use


7.1. Assembly (illustration A)

- 1 Loosen the bottom of the anti-folding mechanism (1).
- 2 Pull up the lever (2), fold the steering tube (6) forward, until it „clicks“.
- 3 Tighten the anti-folding mechanism.

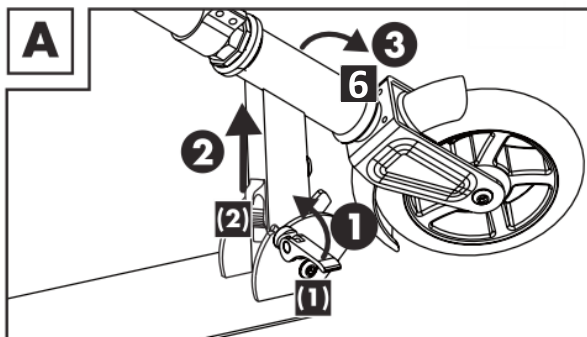

7.2. Assembly of steering wheel handles (illustration B)


- Pull the handle bars (3) out of the fixing (4).
- Press the blocking buttons (5) on the handle bars and slip in the handle bars from the both sides of the steering tube T (6). The blocking button must fit into the appropriate sockets (7) of the steering tube.

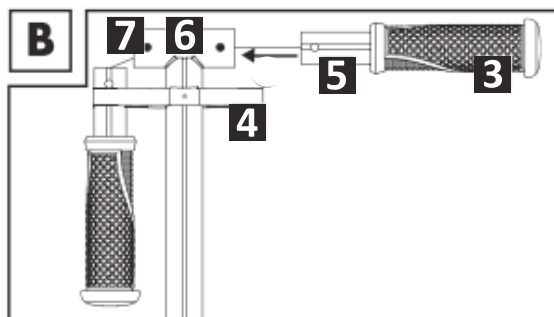

7.3. Steering tube height adjustment (illustration C)


- Steering tube T (6) can be regulated at the three different steps.
- **ATTENTION!** The product can be used only after the safety button (5) “clicked” into the appropriate socket (9), and the steering tube T (6) got secured by the quick closure (8).

- 1 Loosen the quick closure (8) on the steering tube (6).
- 2 Pull the steering column (6) up, until the locking button (5) its into the appropriate socket (9).
- 3 Secure the steering tube by the quick closure.

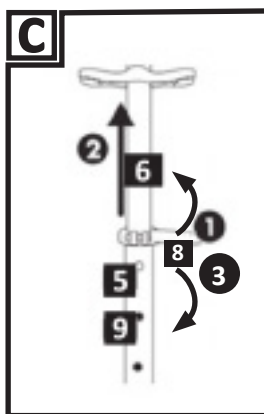

Attention! Before use, make sure the quick closure of the steering tube is properly blocked. Accident risk.


7.4. The bearing of the steering head (illustration D)

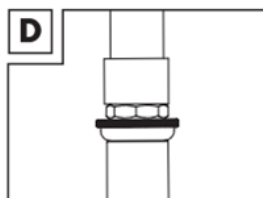

- When buying the product, the bearing of the steering head has already been set up. If during the use of the scooter, the steering tube is too loosely or tightly pressed, the bearing should be readjusted in a bicycle service.


7.5. The disassembly of the product before transportation (illustration E, F, G)

- Loosen the quick closure (8) on the steering tube (6), press the blocking button (5), move the steering tube (6) all the way down, then block the quick closure.
- Loosen the anti-folding mechanism at its bottom before disassembling (ill. E), pulling up the levers (2). Press the steering tube (6) toward the platform until it “clicks” (ill. F). Block the anti-folding mechanism at its bottom (ill. G).

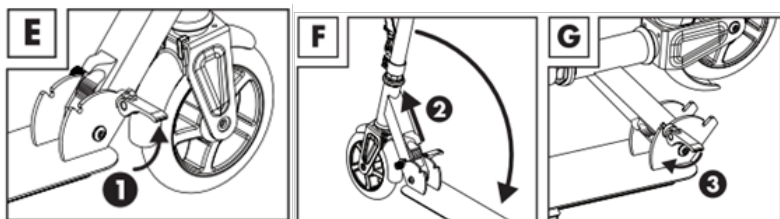

7.6. Riding, braking, parking (illustration H)


- Put the foot on the platform (10) and speed up pushing off the ground with the other foot.
- In order to stop, press on the back brake (11) or the hand brake (18).
- In order to park, use the stand (12).
- **ATTENTION:** The product must be parked on the flat surface only.

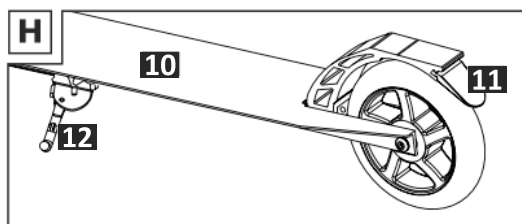

7.7. Wheels replacement (illustration I)

ATTENTION: It is necessary to comply with the technical specifications of the scooter. Wheels with a different diameter can change the type of the ride or even jeopardize the safety of the user.

- As a result of the use of a product, the wheels gradually wear down, depending on the weather conditions, the type of the surface, weight of the user's body, the material and hardness of the wheels. It is recommended to replace the wheels once in a while.
- Unscrew the mounting screws (13) with the help of the two Allen keys (size 5, included in the set).
- Pull out the mounting screws and take out the wheel.
- Install a new wheel (14) and fix it with the mounting screws (13).

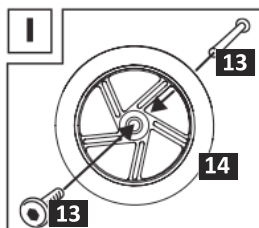


ATTENTION: If following the replacement of the wheels, the wheels are hanging about the sides and are rubbing the sides, do not use the product!

- After a few minutes of driving, check whether all screws are firmly attached and are not loosened or detached. Tighten the screws again to make sure that the wheel spins freely and that the bearing do not make any noise.

7.8. Replacement of the bearings in wheels (illustration J)

- Remove the wheels (14) (see section 7.7.).
- Squeeze the bearing out with a spacer (17) using the Allen key and take the spacer out.
- Remove the bearing (15) using the Allen key.
- Install the new bearing. Turn the wheel, insert the spacer (17), and then press the second new bearing.
- Re-attach the wheels.

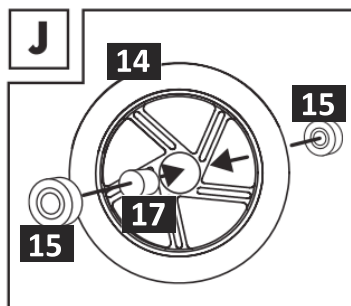

8 Cleaning and care

Regular maintenance enhances the safety of the scooter.

1. It is recommended that the product be thoroughly cleaned and dried after use. Remove small pebbles and other items that might have become trapped in the wheels/sleigh runners.
2. Wipe of wet wheel bearings/sleigh runner surfaces with a dry cloth.
3. In order to prevent rust, grease the outer side of the bearings with an appropriate lubricant.
4. Regularly inspect the condition of the wheels, sleigh runners, rigidity of assembly points, steering tube height lock, product folding/unfolding lock and the platform (for wear or damage to the an-skid surface). Also check the condition of the fixings – make sure that the bolts and nuts are tightly tightened (after some time of use, the fasteners may loosen and loose effectiveness).
5. The product should be stored in a dry place.
6. Do not make any modifications apart from described in this instruction manual.

9 Repair

Do not repair the product on your own. Always have the product repaired by a professional.

When replacing the bearings and wheels, always make sure that the new elements are of an equivalent class as those in the product specification.

10 Disposal

Keep the packaging materials out of children's reach, as the materials can pose a hazard.

The packaging should be disposed of in accordance with local regulations.

11 Handling and storage

It is recommended to store the product in its original packing.

Always store the product in dry and ventilated place which is out of children access.

Protect the product against vibrations and tremors during the transport.

12 Declaration

The product is designed, manufactured and introduced into the market according to the regulations EN 14619:2019 (class A).

13 Warranty

To submit a complaint about the product, **please contact the Seller.**

All questions and problems related to the functioning of the product, or the submission of a complaint can be directed to us:

- by e-mail: **infolinia@vershold.com**;
- by telephone: +48 667 090 903.

Guarantee

1. This product is covered by the warranty. The warranty period is in accordance with the statutory law of the country in which the point of sale is located. The warranty period is not less than 36 months from the date on which the item was delivered to the buyer.
2. The product will, at the Guarantor's discretion, be subject to:
 - a) free repair by the Guarantor, with the proviso that the disassembled, damaged, or defective parts of the product become the property of the Guarantor in order to ensure the safety of the Customer,
 - b) replacement of the product with a new one at the place of purchase of the product, therefore the damaged or defective product becomes the property of the Guarantor,
 - c) return in exchange for a refund of the price for the purchased product, therefore the damaged or defective product becomes the property of the Guarantor.
3. A defective product is a product that does not fulfill the functions specified in the instruction manual, and the reason for this condition is an internal property of the device.
4. The person entitled to the warranty is obliged to deliver the device to the Customer Service Center in each store for the purpose of submitting a complaint. When exercising the rights under the warranty, a purchase receipt or an invoice should be presented and a detailed description of the product defect should be provided.
5. The warranty does not cover products with mechanical damage which is not the fault of the producer or distributor, due to improper use or resulting from force majeure.
6. The warranty does not apply to products in which the security seal has been removed, unless an authorized service employee has done so.
7. The repair center will use its best endeavors to repair within 21 days. This period may be extended up to 1 month in the event of a need to purchase spare parts that are not currently available to the repair point.
8. It is recommended to advertise complete equipment in order to improve service activities.
9. This warranty does not exclude, limit or suspend the buyer's rights resulting from the statutory rights.
10. The territorial coverage of the warranty covers the territory of the country in which the product was sold.

Importer (Warrantor):

VERSHOLD POLAND Sp. z o.o.
ul. Żwirki i Wigury 16A,
02-092 Warsaw, Poland
Made in China